

# Apéro



## INSTALLATION AND CONNECTION

**Recommended installation height** 10 cm (4 in).

**Clearances**


■ Front: 50 cm (20 in) ◀ Sides: 15 cm (6 in) ▲ Above: 10 cm (4 in) ▼ Underneath: 10 cm (4 in).

**Installation** Quick-mounted surface installation with easy snap-on bracket that also serves as marking template.

**Connection** 240-V/208-V unit: Flexible cord connection, including junction box cover. Installation requires 2 in X 3 in wall box (not included).

120-V unit: Plug-in connection with 180 cm (6 ft) flexible cord.

**Note** 3-conductor cable or 2-conductor cable with a third wire should be used if unit is to be linked with the Convectair Programmer module (7392 FP).

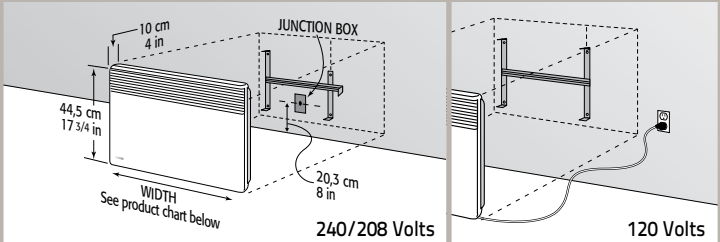

## HEATING ELEMENT

**Total capacity** 500 to 2000 W

**Convection** X-shaped, monoblock element made of surface-treated extruded aluminum.

**Thermal protection** Automatic (240-V/208-V) or manual (120-V) reset overheat protection.

## TEMPERATURE CONTROL

**Electronic thermostat** Built-in electronic proportional-action thermostat ultraprecise to 1/10°C (1/5°F).

**Programmer** Programmer-compatible, pilot wire only (240-V/208-V unit).

## CONTROL PANEL

**Select unit of temperature in °C or °F** by key combination.

**Location** On top right-hand side of the unit.

**240-V/208-V unit:**

« + and - » **buttons** set the temperature and lock the controls.

**Mode button** with 5 settings: Comfort; Economy; Frost protection (7°C (45°F)); Heat off; Program (programmed setback when connected to the Convectair Programmer).

**On/Off switch** on the side of the unit.

**Heating indicator light.**

**Programmer indicator light.**

**120-V unit:**

**Dial** Lockable thermostat control dial and Frost protection (7°C (45°F)).

**On/Off switch.**

**Heating indicator light.**

## CABINET

**Steel** construction with polyester/epoxy anti-rust powder coating and resistant to UV rays.

**Cabinet** Bottom-mounted protective pan with rounded edges.

**Louvers** Front-louvered air outlet that hides the unit interior and directs heat towards the centre of the room.

**Colour** **BB** = White (240-V/208-V unit) **BM** = Mimetic white (120-V unit) **HS** = Charcoal (240-V/208-V unit).

MODEL	Catalogue No.	Colour	Power		Height		Width		Depth		Net Weight	
			240 V	208 V	cm	in	cm	in	cm	in	kg	lb
APÉRO ② ⑨	7359-C05	BB	500 W	375 W	44,5	17 3/4	34	13 3/8	10	4	3,1	6,9
	7359-C07	BB HS	750 W	565 W	44,5	17 3/4	34	13 3/8	10	4	3,3	7,2
	7359-C10	BB HS	1000 W	750 W	44,5	17 3/4	42	16 1/2	10	4	3,7	8,1
	7359-C12	BB	1250 W	940 W	44,5	17 3/4	50	19 5/8	10	4	4,1	9,1
	7359-C15	BB HS	1500 W	1125 W	44,5	17 3/4	58	22 7/8	10	4	4,8	10,7
	7359-C17	BB	1750 W	1315 W	44,5	17 3/4	66	26	10	4	5,3	11,7
	7359-C20	BB HS	2000 W	1500 W	44,5	17 3/4	74	29 1/8	10	4	5,9	13,1
	7359-C28	BB	N/A	2000 W	44,5	17 3/4	74	29 1/8	10	4	5,9	13,1
<b>120 VOLTS</b> <b>PLUG-IN</b>												
APÉRO ④	7358-B05	BM	500 W		44,5	17 3/4	34	13 3/8	10	4	3,4	7,5
	7358-B12	BM	1250 W		44,5	17 3/4	66	26	10	4	5,9	13

Depth includes the mounting brackets.

② Compatible with the Programmer pilot-wire system (see technical specifications for catalogue number 7392).

④ Not compatible with the Programmer system. For use with 120-V outlets.

⑨ Compatible with the wall-mount controller AWC.

For guaranteed, dependable operation, we recommend that all units be installed by a licensed electrical contractor in accordance with national and local codes. Consult [convectair.com](http://convectair.com) to find the most recent installation instructions for our heaters.

