



Recessed and Trac Lighting

# INSTALLATION INSTRUCTIONS

## For Juno R Series Trac Connectors, Electrical Feeds and Accessories

Juno R series connectors, electrical feeds and accessories are to be used only with Juno R Series Trac. Some Juno R Series Connectors can also be used as Electrical Feeds as noted. All Juno Trac Components are both mechanically and visually polarized to assure proper connections and to simplify installation.

 
- Trac face has polarity line indicating positive side
- Trac connectors have embossed arrow which must point towards the Trac polarity line when installed.

Important: Completely read instructions before attempting installation. Electrical Rating: 120V, 60Hz and 20 amp max


### R23 Mini-Connector

Joins two Trac Sections end-to-end. Use to continue a straight run.


1. Make sure main power is OFF.
2. Insert Mini-Connector fully into Juno Trac with polarity arrow pointing towards Trac polarity line. Secure with set screws.
3. Attach Trac to ceiling (or wall) following instructions supplied with the Juno Trac section.



Polarity Line

 


Polarity Arrow

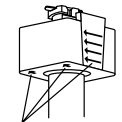

Polarity Arrows

### R23 Mini-Connector

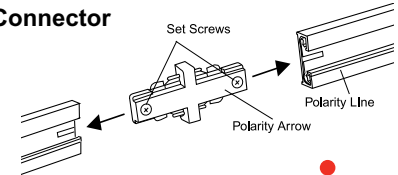

### WARRANTY

Juno warrants that its products are free from defects in material and workmanship. Juno's obligation is expressly limited to repair or replacement, without charge, at Juno's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

1300 South Wolf Road • Des Plaines, IL 60018 • Phone 800-323-5068 • [www.junolightinggroup.com](http://www.junolightinggroup.com)

