



97071HV



97074HV



97077HV



97151HV




97154HV



97401KSHV



97402KSHV

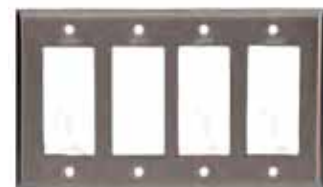

97404KSHV

DESCRIPTION	FOR USE WITH 1204 BOXES	FOR USE WITH 347V MBD OR MBS
347V Wall Plates		
1-gang, Toggle Switch 347V	97071HV	97071HV
2-gang, Toggle Switch 347V	97072HV	97072HVR
3-gang, Toggle Switch 347V	97073HV	97073HVR
4-gang, Toggle Switch 347V	97074HV	97074HVR
5-gang, Toggle Switch 347V	97075HV	97075HVR
6-gang, Toggle Switch 347V	97076HV	97076HVR
7-gang, Toggle Switch 347V	97077HV	97077HVR
1-gang, blank 347V box mount 3.531"	97151HV	97151HV
2-gang, blank 347V box mount 3.531"	97152HV	97152HVR
3-gang, blank 347V box mount 3.531"	97153HV	97153HVR
4-gang, blank 347V box mount 3.531"	97154HV	97154HVR
1-gang, toggle switch 347V king-size plate	97071KSHV	97071KSHV
1-gang, Decora 347V king-size plate	97401KSHV	97401KSHV
2-gang, Decora 347V box mount 3.531" king-size plate	97402KSHV	97402KSHVR
3-gang, Decora 347V box mount 3.531" king-size plate	97403KSHV	97403KSHVR
4-gang, Decora 347V box mount 3.531" king-size plate	97404KSHV	97404KSHVR