

Multimeters

Electrical Test Kit

- The MM300 multimeter was developed to withstand daily wear and tear on the job site, and has a safety rating of CAT III 600V, Class 2, Double insulation.
- The NCVT-1 has a bright green LED to indicate the tester is working; it changes to red and warning tones sound when voltage is detected.
- NCVT-1 has a digitally-controlled ON/OFF power button and auto power-off feature to conserve and extend battery life.
- Receptacle tester detects wiring configurations and indicates correct wiring, open ground, open hot, open neutral, hot/ground reversed; it does not indicate quality of ground, multiple hot wires, or a combination of defects.
- Includes visual and audible continuity indicators up to 25Ω.
- Includes test leads and batteries.



NEW!



 
Cat. No.	Kit Contains	Weight
69149		15.1 oz. (428 g)

Cat. No.	Batteries	Height	Width	Depth	Weight
MM300	2 x AAA	6" (152 mm)	3.07" (78 mm)	1.78" (45 mm)	8.1 oz. (230 grams)
NCVT-1	2 x AAA	5.5" (140 mm)	.72" (16 mm)	N/A	1.6 oz. (46 g)
receptacle tester	N/A	2.75 (70 mm)	1.5 (38 mm)	1" (25 mm)	1.3 oz. (37 grams)
test leads	N/A	41" (1,041 mm)	N/A	N/A	3.2 oz. (90.7 grams)

See information about the MM300 multimeter on page 204 and for the non-contact voltage tester on page 207.

Multimeter Replacement Fuses

NEW!



69033



69192

Cat. No.	For Use With	Fuse Type
69191	MM1000, MM1300, MM2000, MM2300, MM6000	F 11A / 1000V
69192	MM1000, MM1300, MM2000, MM2300, MM6000	F 440mA / 1000V
69193	MM100 Fuse Kit	F10A / 500V, F250mA / 250V
69194	MM200 Fuse Kit	F10A / 500V, F400mA / 250V
New Test and Measurement Instruments		
69031	MM300	5x20 200MA 600V NEW!
69032	MM300, MM400	6x32 10A 600V NEW!
69033	MM400	5x20 500MA 600V NEW!
69034	MM600, MM700	10x38 10A 1000V NEW!
69035	MM600, MM700	6x32 500MA 1000V NEW!

Multimeter Specifications

Cat. No.	CAT Rating	Batteries	Height	Width	Depth	Weight	Included Accessories
MM300	CAT III 600V	2 x AAA	6" (152 mm)	3.07" (78 mm)	1.78" (45 mm)	8.1 oz. (230 grams)	Test leads and batteries NEW!
MM400	CAT III 600V	2 x AAA	6" (152 mm)	3.07" (78 mm)	1.78" (45 mm)	8.1 oz. (230 grams)	Test leads, batteries and thermocouple NEW!
MM600	CAT IV 600V	2 x AAA	7" (178 mm)	3.54" (90 mm)	2.1" (53 mm)	14.6 oz. (414 grams)	Carrying case, test leads, thermocouple, and batteries NEW!
MM700	CAT IV 600V	2 x AAA	7" (178 mm)	3.54" (90 mm)	2.1" (53 mm)	14.6 oz. (414 grams)	Carrying case, test leads, thermocouple, batteries, and alligator clips NEW!

⚠️ WARNINGS:

To ensure safe operation and service of the tester, follow these instructions. Failure to observe these warnings can result in severe injury or death.

- Before each use, verify meter operation by measuring a known voltage or current.
- Never use the meter on a circuit with voltages that exceed the category based rating of this meter.
- Do not use the meter during electrical storms or in wet weather.
- Do not use the meter or test leads if they appear to be damaged.
- Ensure meter leads are fully seated, and keep fingers away from the metal probe contacts when making measurements.
- Do not open the meter to replace batteries while the probes are connected.
- Use caution when working with voltages above 60V DC, or 25V AC RMS. Such voltages pose a shock hazard.
- To avoid false readings that can lead to electrical shock, replace batteries if a low battery indicator appears.
- Unless measuring voltage or current, shut off and lock out power before measuring resistance or capacitance.
- Always adhere to local and national safety codes. Use individual protective equipment to prevent shock and arc blast injury where hazardous live conductors are exposed.

All dimensions are in inches and (millimeters).



www.kleintools.com

See page 296 for additional information on warnings.

