



1554 FOOT MOUNT KIT

- 2 - L FOOT
- 2 - R FOOT
- 4 - M4 - 0.7 x 16mm FLAT HEAD
STAINLESS STEEL SCREW
- 4 - M4 - 0.7 x 7mm
STAINLESS STEEL NUT


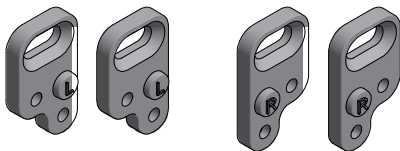


1554 FOOT DIMENSIONS



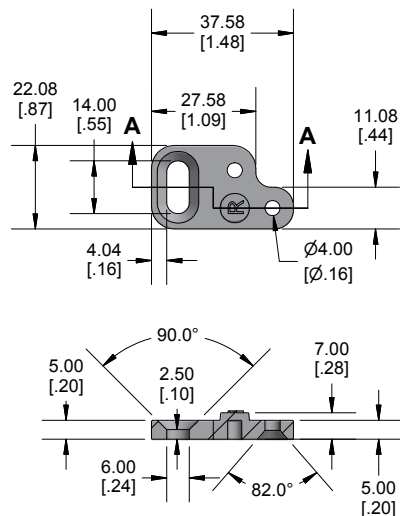


SECTION A-A



1. PLACE THE M4 NUTS INSIDE THE MOUNTING HOLE POCKET.

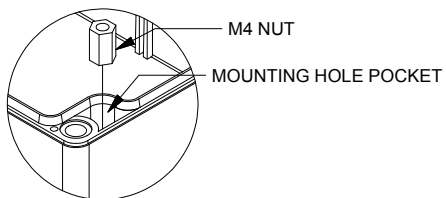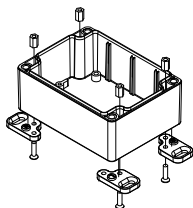

2. LINE UP LARGE HOLE ON THE BOX WITH LETTERS ON THE FEET. THERE ARE TWO OPTIONS FOR THE MOUNTING FEET.

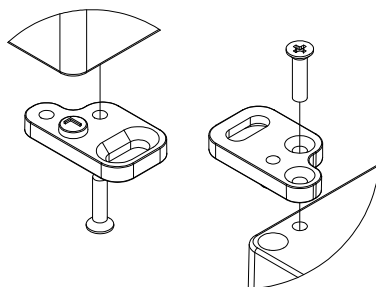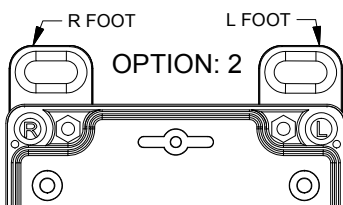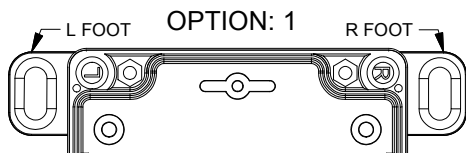

2. INSTALL SCREWS AT A TORQUE OF 115-125 cN-m [10.18-11.06 lbf-in]

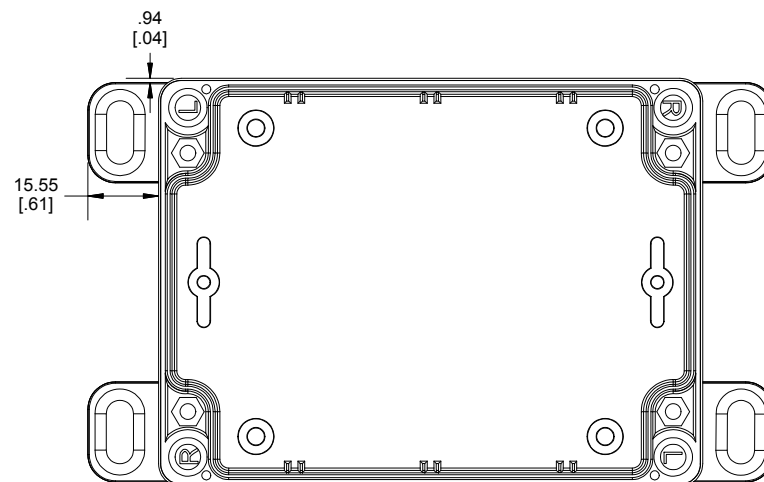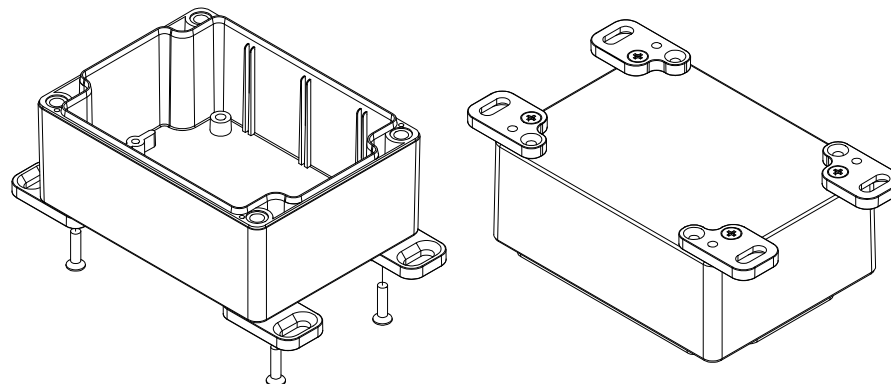

NOTE

Purchased assembly includes 2 right feet, 2 left feet, 4 nuts 4 screws.
Feet molded from Polycarbonate (Matl UL94 - 5VA @ 3mm)

Recommended Cover screw torque -- 115-125 cN-m [10.18-11.06 lbf-in]

1554

ACCESSORIES

1554 mounting foot kit

1554FT

**HAMMOND
MANUFACTURING .**
1554FT
INSTRUCTIONS
www.hammondmfg.com

REV: 06.11.2019