## Diagrams

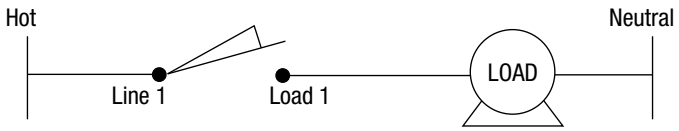


Example for SPST motor load control.

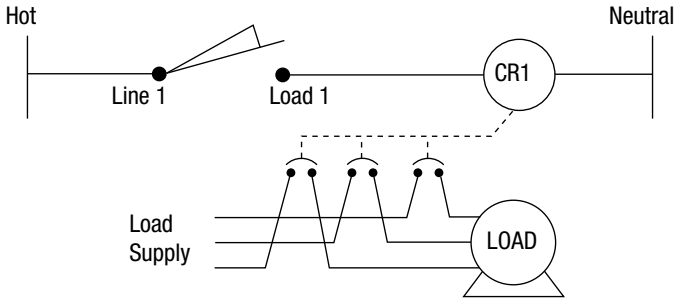


Example for SPST large motor load control using a 3-pole contactor or motor starter.

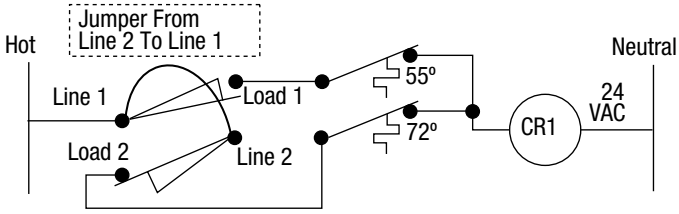


Example for control of low voltage set-back set-up thermostats using SPDT timer.

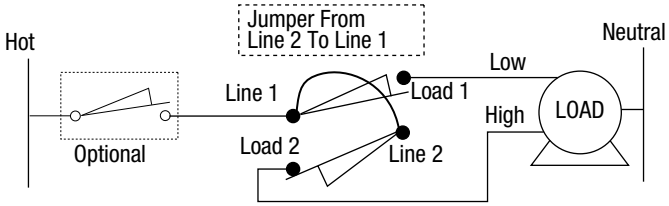


Example for timed selection of low or high speed motor with optional timer to limit operation time regardless of speed selected.

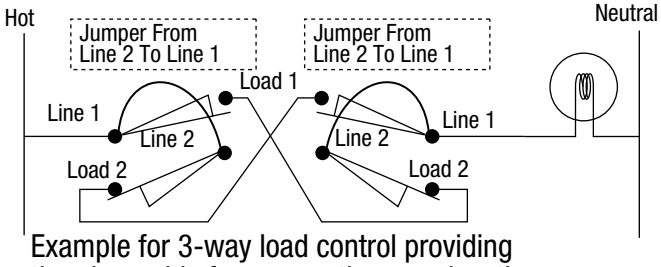


Example for 3-way load control providing timed override from more than one location.

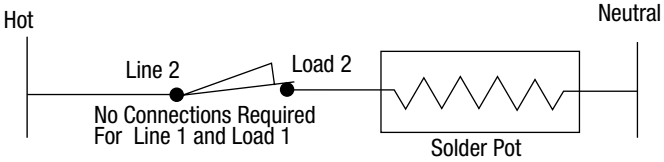


Example for reverse action control. The load is switched off when timer is operated for a limited time then switches back on.

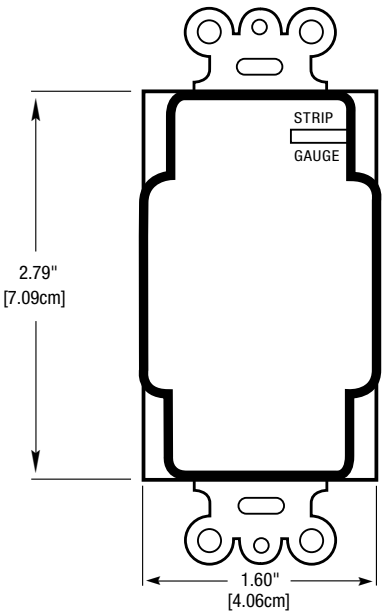


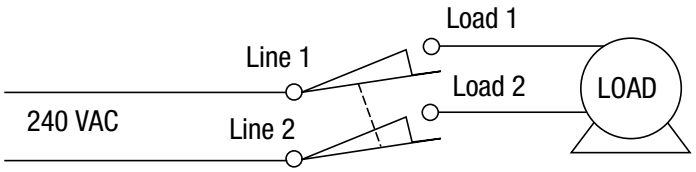


Example for breaking both sides of a 240 volt load using DPST contacts.

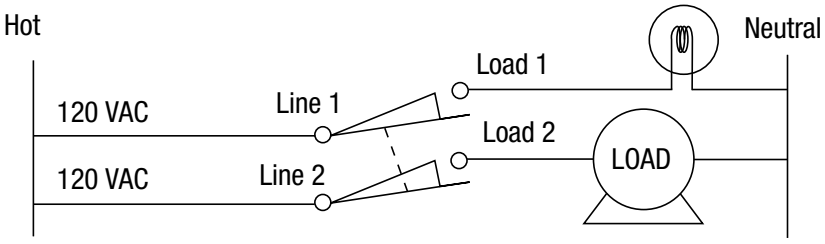


Example for controlling two loads simultaneously by using DPST contacts.

## Notes