



SIGNALISATION  
SIGNAUX



LISTED  
HOMOLOGUÉ

SINGLE AND/OR MULTIPLE  
STATION SMOKE ALARM

# Photoelectric Smoke Alarm with LED Strobe and Voice User Guide

Model: **P4010ACLEDSCA** (with voice message system)



120V AC with 10-year sealed lithium battery backup

**NOTE:** Battery backup supplies power to the smoke alarm portion only. Strobe will not work without AC power.

**ATTENTION:** Please take a few minutes to thoroughly read this user guide which should be saved for future reference and passed on to any subsequent owner.

# **What to do When the Alarm Sounds!**

**Smoke alarm pattern is 3 long beeps, repeating, followed by "Fire! Feu!". Strobe will flash once per second.**

## **NEVER IGNORE THE SOUND OF THE ALARM!**

Smoke alarms are designed to minimize false alarms. Cigarette smoke will not normally set off the alarm, unless the smoke is blown directly into the alarm. This unit contains nuisance alarm protection, which will reduce the impact of cooking particles. However, large quantities of combustible particles from spills or broiling could still cause the unit to alarm. Careful location of the unit away from the kitchen area will give the maximum nuisance alarm protection. Combustion particles from cooking may set off the alarm if located too close to the cooking area. Large quantities of combustible particles are generated from spills or when broiling. Using the fan on a range hood which vents to the outside (non- recirculating type) will also help remove these combustible products from the kitchen. If the alarm sounds, check for fires first.

If a fire is discovered follow these steps. Become thoroughly familiar with these items, and review with all family members!

- Alert small children in the home as well as anyone else that might have difficulty recognizing the importance of the alarm sounding or that might have difficulty leaving the area without help.
- Leave immediately by your escape plan. Every second counts, so don't waste time getting dressed or picking up valuables.
- In leaving, don't open any inside door without first feeling its surface. If hot, or if you see smoke seeping through cracks, don't open that door! Instead, use your alternate exit. If the inside of the door is cool, place your shoulder against it, open it slightly and be ready to slam it shut if heat and smoke rush in.

# **What to do When the Alarm Sounds**

**Smoke alarm pattern is 3 long beeps, repeating, followed by “Fire! Feu!”. Strobe will flash once per second.**

- If the escape route requires you to go through smoke, stay close to the floor where the air is cleaner. Crawl if necessary, and breathe shallowly through a cloth, wet if possible.
- Once outside, go to your selected meeting place and make sure everyone is there.
- Call the fire department from your cell phone outside, or from your neighbor's home-not from yours!
- Don't return to your home until the fire officials say that it is all right to do so.
- Do not reenter under any circumstance until fire officials say that it is safe to do so.
- There are situations where a smoke alarm may not be effective to protect against fire as stated in the NFPA Standard 72. For instance:
  - a) smoking in bed
  - b) leaving children home alone
  - c) cleaning with flammable liquids, such as gasoline
  - d) fires where the victim is intimate with a flaming initiated fire; for example, when a person's clothes catch fire while cooking

# What to do When the Alarm Sounds!

**⚠ WARNING:** This alarm DOES NOT detect Carbon Monoxide (CO) and is not a substitute for owning a Carbon Monoxide Alarm.

If CO is detected from any other unit in an interconnected system, the carbon monoxide (CO) alarm pattern will sound 4 quick beeps in time with red LED flashes, repeating every 5 seconds, followed by "Warning! Carbon Monoxide! Monoxyde de carbone!" The strobe will flash 4 times every 5 seconds.

The smoke alarm takes precedence when both smoke and carbon monoxide are present.

## Carbon Monoxide Alarm Procedure

**⚠ WARNING:** Activation of the CO Alarm indicates the presence of Carbon Monoxide (CO) which can kill you.

- 1) Immediately move to fresh air – outdoors or by an open door/window. Do a head count to check that all persons are accounted for. Do not re-enter the premises nor move away from the open door/window until the emergency services responders have arrived, the premises have been aired out, and your alarm remains in its normal condition.
- 2) Call your local emergency service.  
(fire department or 911)

PHONE NUMBER

Never restart the source of a CO problem until it has been corrected. Never ignore the sound of the alarm!

If the unit is sounding a CO alarm signal, pressing the Test/Hush button on this unit will do nothing. Pressing the Test/Hush button on the initiating CO or Combination alarm unit will terminate the CO alarm on all interconnected units. If the CO condition that caused the alarm in the first place continues, the initiating alarm unit will reactivate in alarm mode. If the unit goes into alarm mode again within six minutes, it is sensing high levels of CO which can quickly become a dangerous situation.

# Contents of This User Guide

1. Introduction
2. Product Features and Specifications
3. Limitations of Smoke Alarms
4. Recommended Locations
5. Locations To Avoid
6. Installation / Mounting Instructions
7. Operation And Testing
8. Visual And Audible Indications
9. Nuisance And Hush
10. Battery
11. Deactivation Of Alarm
12. Maintenance
13. Good Safety Habits
14. Warranty

## 1. Introduction

Model **P4010ACLEDSCA** AC wire-in photoelectric smoke alarm and LED strobe light can be directly interconnected with Kidde 3-wire smoke, heat and CO alarms. This alarm is acceptable for use in all residential applications where smoke alarms are required, and can be used as a Single Alarm or in a Multiple Alarm system, (up to 24 devices).

Thank you for purchasing this integrated smoke/strobe alarm. It is an important part of your family's home safety plan. You can trust Kidde to provide the highest quality safety products. We know you expect nothing less when the lives of your family are at stake.

Please take a few minutes to thoroughly read this user guide, and save it for future reference. Teach children how to respond to the alarms, and that they should never play with the unit.

If you have any questions about the operation or installation of your alarm, please call our toll free Consumer Hotline at 1-800-880-6788.

## 1. Introduction

**IMPORTANT:** Read all instructions before installation and keep this user guide near the alarm for future reference.

**Do not try to repair the smoke alarm yourself. Refer to the instructions in Warranty section for service.**

**⚠ WARNING! Do not try to repair this unit yourself.**

**⚠ WARNING! Disconnection or loss of AC and depleted batteries will render this signaling device inoperative.**

**⚠ WARNING! The strobe light is extremely bright. Do not look directly at the light when the light is flashing.**

This alarm detects products of combustion using photoelectric technology. After ten (10) years of cumulative power up, this unit will "chirp" two times every 30 seconds. This is an "operational end of life" feature which will indicate that it is time to replace the alarm.

To help identify the date to replace the unit, a label has been affixed to the side of the alarm. Write the "Replace by" date (10 years from initial power up) in permanent marker on the label prior to installing the unit.

## 2. Product Features and Specifications

### **Model Number:**

P4010ACLEDSCA (3 wire interconnect unit)

### **Power:**

120 V AC (60Hz, 863 mA max) wire-in connector with sealed lithium battery backup

**Interconnectable to other compatible alarms (see Installation / Mounting Instructions section for details).**

**Note:** If more than one P4010ACLEDSCA strobe is in the interconnected system, all other P4010ACLEDSCA strobes will synchronize within 20 seconds of an initiating alarm.

### **Alarm events:**

**Smoke Alarm:** Repeating pattern of 3 long beeps in time with red LED blinks, followed by "Fire! Feu!" Strobe flashes once every second continuously.

**⚠ WARNING: This alarm DOES NOT detect Carbon Monoxide (CO) and is not a substitute for owning a Carbon Monoxide Alarm.**

**CO Alarm:** If CO is detected from any other unit in an interconnected system, alarm will sound a repeating pattern of 4 quick beeps in time with red LED blinks, followed by "Warning! Carbon Monoxide! Monoxyde de carbone!" Strobe will flash 4 times every 5 seconds.

## 2. Product Features and Specifications

### Temperature:

Operating Range: 4.4°C (40°F) to 37.8°C (100°F)

### Humidity:

Operating range: 0-95% relative humidity, non-condensing

### Audible Alarm:

85+ dB at 10' @ 3.2±0.5 KHz pulsing alarm, with voice messages "Fire! Feu!" **NOTE:** This is not a CO alarm, but it will receive and transmit a CO alarm signal (with voice message "Warning! Carbon Monoxide. Monoxide de carbone!") from an interconnected CO or combination smoke/CO alarm.

### Sensor:

Photoelectric

### Mounting:

Wall or ceiling


### Applications:

Primary Direct or Indirect and Supplementary

### Light Output:

177 Candela minimum (on axis measurement)

The following diagrams show that the light intensity gradually decreases as the viewing angle is increased. Use this information to determine the best location for the strobe light.

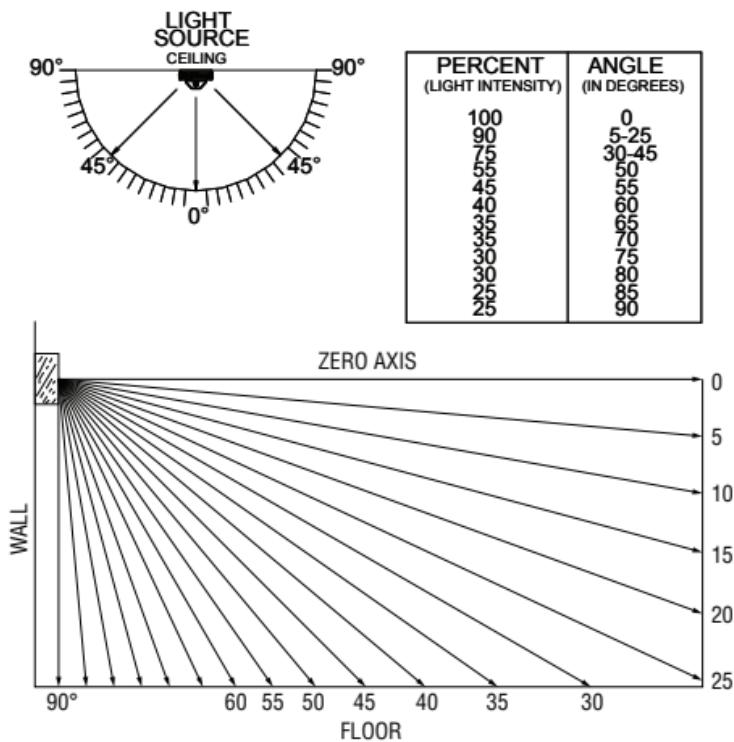

### 3. Limitations of Smoke Alarms



#### WARNING: PLEASE READ CAREFULLY AND THOROUGHLY


- NFPA 72 states: Life safety from fire in residential occupancies is based primarily on early notification to occupants of the need to escape, followed by the appropriate egress actions by those occupants.
- Fire warning systems for dwelling units are capable of protecting about half of the occupants in potentially fatal fires. Victims are often intimate with the fire, too old or young, or physically or mentally impaired such that they cannot escape even when warned early enough that escape should be possible. For these people, other strategies such as protection-in-place or assisted escape or rescue are necessary.
- Leading authorities recommend that both ionization and photoelectric smoke alarms be installed to help ensure maximum detection of the various types of fires that can occur within the home. Ionization sensing alarms may detect invisible fire particles (associated with fast flaming fires) sooner than photoelectric alarms. Photoelectric sensing alarms may detect visible fire particles (associated with slow smouldering fires) sooner than ionization alarms.
- A battery powered alarm must have a battery of the specified type, in good condition and installed properly. This model is AC powered with a sealed backup battery.
- Smoke alarms must be tested regularly to make sure the battery and the alarm circuits are in good operating condition.
- Smoke alarms cannot provide an alarm if smoke does not reach the alarm. Therefore, smoke alarms may not sense fires starting in chimneys, walls, on roofs, on the other side of a closed door or on a different floor.
- If the alarm is located outside the bedroom or on a different floor, it may not wake up a sound sleeper.
- The use of alcohol or drugs may also impair one's ability to hear the smoke alarm. For maximum protection, a smoke alarm should be installed in each sleeping area on every level of a home.
- Although smoke alarms can help save lives by providing an early warning of a fire, they are not a substitute for an insurance policy. Home owners, landlords and tenants should have adequate insurance to protect their lives and property.

## 4. Recommended Locations

### **⚠ WARNING: PLEASE READ CAREFULLY AND THOROUGHLY**

- For rooms larger than 250 sq. ft. (4.27m x 4.88m – 14' x 16') the notification device should be located within 4.88m (16') of the pillow when located in a sleeping area.
- Locate the first strobe/smoke alarm in the bedroom in which the hearing impaired individual sleeps. Try to monitor the exit path, as the bedrooms are usually farthest from the exit. Locate the first alarm in the immediate area of the bedrooms. If more than one sleeping area exists, locate additional alarms in each sleeping area (Figure 1A).
- Locate additional strobe lights or combination smoke/strobe alarms in any lived-in room where a hearing impaired individual would need to be notified of an alarm condition and near any stairway as stairways act like chimneys for smoke and heat.
- Locate at least one alarm on every floor level (Figure 1B).
- Locate an alarm in every Sleeping Room.
- Locate an alarm in every room where electrical appliances are operated (i.e. portable heaters or humidifiers).
- Locate an alarm in every room where someone sleeps with the door closed. The closed door may prevent an alarm not located in that room from waking the sleeper.
- Smoke, heat, and combustion products rise to the ceiling and spread horizontally. Mounting the smoke alarm on the ceiling in the center of the room places it closest to all points in the room. Ceiling mounting is preferred in ordinary residential construction.
- When mounting an alarm on the ceiling, locate it at a minimum of 10 cm (4") from the side wall (Figure 2A).
- When mounting the alarm on the wall, use an inside wall with the top edge of the alarm at a minimum of 10 cm (4") and a maximum of 30.5 cm (12") below the ceiling (Figure 2A).
- Put smoke alarms at both ends of a bedroom hallway or large room if the hallway or room is more than 9.1 m (30') long.
- For mobile home installation, select locations carefully to avoid thermal barriers that may form at the ceiling. For more details, see Mobile Homes.


## 4. Recommended Locations

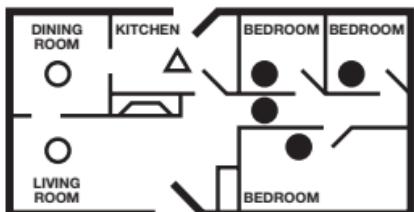

- Required Smoke or Smoke / CO Alarms
- Smoke Alarms for Additional Protection
- △ Ionization Type Smoke Alarm with Hush® Control or Photoelectric Type


SINGLE FLOOR PLAN

FIGURE 1A

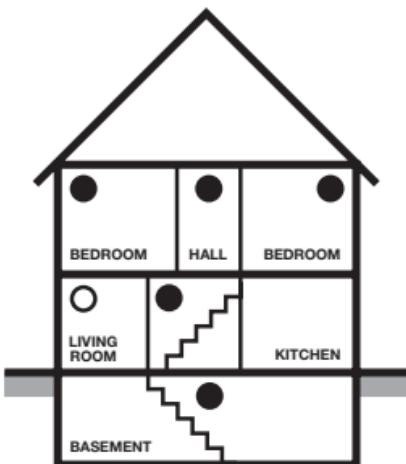

MULTIPLE FLOOR PLAN

FIGURE 1B

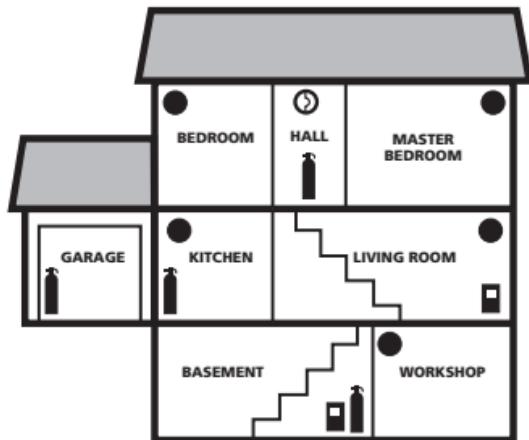

- FIRE EXTINGUISHERS
- SMOKE ALARMS
- CARBON MONOXIDE ALARMS
- SMOKE/CO ALARM

FIGURE 1C TOTAL HOME PROTECTION

- Install smoke alarms on sloped, peaked or cathedral ceilings following the mounting guidelines outlined in Figure 2B and 2C. Smoke alarms in rooms with ceiling slopes greater than 0.3 m in 2.4 m (1 foot in 8 feet) horizontally shall be located on the high side of the room (Figure 2B and 2C).
- Install Smoke Alarms on tray-shaped ceilings (coffered ceilings) on the highest portion of the ceiling or on the sloped portion of the ceiling within 30.5 cm (12") vertically down from the highest point (Figure 2D).

## 4. Recommended Locations

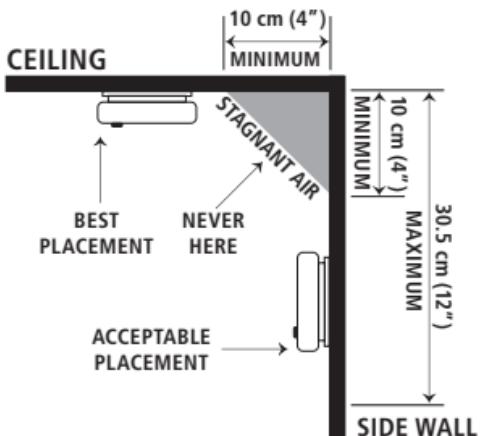


FIGURE 2A

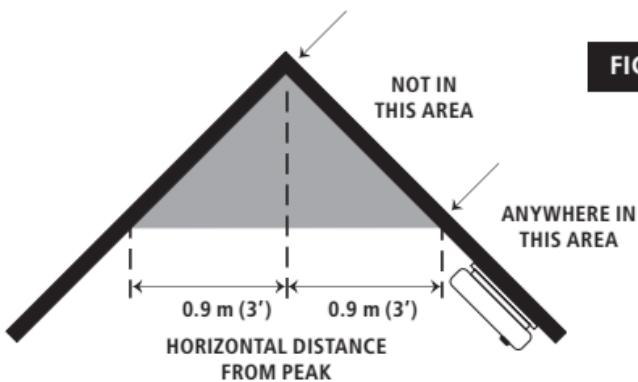


FIGURE 2B

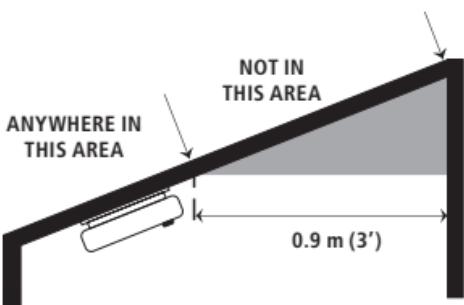


FIGURE 2C

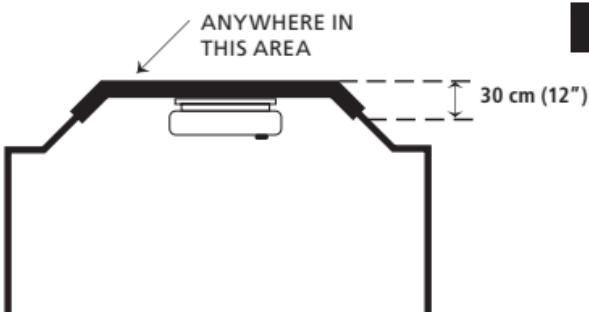


FIGURE 2D

## 4. Recommended Locations

### Mobile Homes

Modern mobile homes have been designed to be energy efficient. Install smoke alarms as recommended in Figure 2A.

In older mobile homes that are not well insulated compared to present standards, extreme heat or cold can be transferred from the outside to the inside through poorly insulated walls and roof. This may create a thermal barrier that can prevent the smoke from reaching an alarm mounted on the ceiling. In such units, install the smoke alarm on an inside wall with the top edge of the alarm at a minimum of 10 cm (4") and a maximum of 30.5 cm (12") below the ceiling (Figure 2A).

If you are not sure about the insulation in your mobile home, or if you notice that the outer walls and ceiling are either hot or cold, install the alarm on an inside wall. For minimum protection, install at least one alarm close to the bedrooms. For additional protection, see Figure 1A.

 **WARNING: Test your smoke alarm operation after mobile home has been in storage or unoccupied, and at least once a week during use.**

## 5. Locations to Avoid

- Do not place in direct sunlight or install near high ambient light areas; the bright light may reduce one's ability to notice the strobe light.
- Extreme temperatures may affect the sensitivity of the alarm. Do not install in areas where the temperature is colder than 4.4°C (40°F) or hotter than 37.8°C (100°F), such as garages and unfinished attics.
- Do not install in areas where the relative humidity (RH) is greater than 95%, non-condensing. Very humid areas, with moisture or steam, can cause nuisance alarms.
- Avoid outdoor locations (this device is not listed for outdoor use).
- Do not install within 0.9 m (3') of the following: The door to a kitchen, or a bathroom that contains a tub or shower, forced air supply ducts used for heating or cooling, ceiling or whole house ventilating fans, or other high air-flow areas.

## 5. Locations to Avoid

- Do not place the alarm where drapes or other objects will block the sensor. Smoke must be able to reach the sensor to accurately detect conditions.
- Do not install in peaks of vaulted ceilings. In this area install as shown in Figures 2B and 2C.
- Install at least 30.5 cm (12") away from fluorescent lights as electronic noise may cause nuisance alarms.
- Keep out of insect infested areas. Avoid excessively dusty, dirty or greasy areas. Dust particles may cause nuisance alarms or failure to alarm.
- Normal cooking may cause nuisance alarms. If a kitchen alarm is desired, it should have an alarm silence feature or be a photoelectric type.
- Do not install within 5 ft of heating or cooking appliances.

## 6. Installation / Mounting Instructions

### Wiring Instructions: Wiring Requirements

- This smoke alarm should be installed on a CSA listed or recognized junction box. All connections should be made by a qualified electrician and all wiring used shall be in accordance with codes having jurisdiction in your area. The multiple station interconnect wiring to the alarms must be run in the same raceway or cable as the AC power wiring. In addition, the resistance of the interconnect wiring shall be a maximum of 10 ohms.
- The appropriate power source is 120 V AC Single Phase supplied from a non-switchable circuit, which is not protected by a ground fault interrupter.
- Smoke alarms are not to be used with detector guards unless the combination (alarm and guard) has been evaluated and found suitable for that purpose.

**⚠ WARNING:** The alarm cannot be operated from power derived from a square wave, modified square wave or modified sine wave, inverter. These types of inverters are sometimes used to supply power to the structure in off grid installations, such as solar or wind derived power sources. These power sources produce high peak voltages that will damage the alarm.

## 6. Installation / Mounting Instructions


### WIRING INSTRUCTIONS FOR AC HARNESS

**⚠ CAUTION! TURN OFF THE MAIN POWER TO THE CIRCUIT BEFORE WIRING THE ALARM.**

- For alarms that are used as single station, DO NOT CONNECT THE RED WIRE TO ANYTHING. Leave the red wire insulating cap in place to make certain that the red wire cannot contact any metal parts or the electrical box.
- When alarms are interconnected, all interconnected units must be powered from a single circuit.
- A maximum of 24 Kidde Safety devices may be interconnected in a multiple station arrangement. The interconnect system should not exceed the NFPA interconnect limit of 12 smoke alarms and/or 18 alarms total (smoke, CO, Smoke/CO Combination, heat detector, etc.). With 18 alarms interconnected, it is still possible to interconnect up to a total of 6 remote signaling devices and /or relay modules (see below for details on interconnecting Kidde devices).
- The following models can be interconnected using the standard AC wiring interconnect: i12020CA, i12020ACA, i12040CA, i12040ACA, i12060CA, i12060ACA, i12010SCA, i12010SCOCA, KN-SMFM-I-CA, KN-COB-ICB-CA, KN-COSM-IBCA, KN-COB-IC-CA, KN-COSM-ICA, KN-COP-IC-CA, KN-COPE-ICA, P12040CA, Pi2000CA, Pi2010CA, SM120X, CO120X, SLED177iCA, P4010ACLEDSCA.
- The maximum wire run distance between the first and last unit in an interconnected system is 305 m (1000').

**FIGURE 3**

**Interconnect Wiring Diagram**

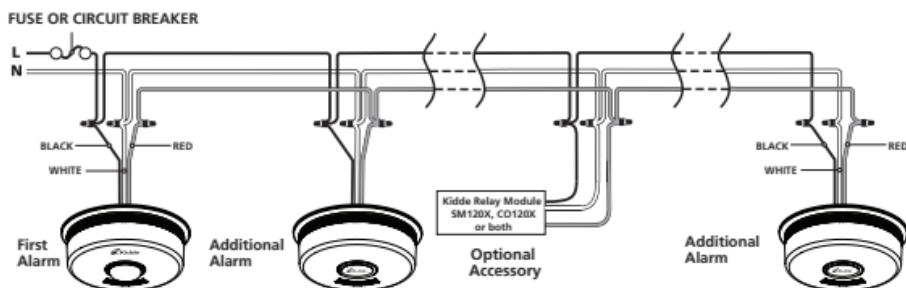

### WIRES ON ALARM HARNESS CONNECTED TO

Black	Hot side of AC line
White	Neutral side of AC line
Red	Interconnect lines (red wires) of other units in the multiple station set up

## 6. Installation / Mounting Instructions

- Figure 3 illustrates interconnection wiring. Improper connection may result in damage to the alarm, failure to operate, or a shock hazard.
- Make certain alarms are wired to a continuous (non-switched) power line. **NOTE: Use standard CSA Listed household wire (as required by local codes) available at all electrical supply stores and most hardware stores.**
- After selecting the proper location for your Smoke/CO Alarm, as described in RECOMMENDED LOCATIONS, and wiring the AC Quick Connect Harness as described in the WIRING INSTRUCTIONS (NOTE: AC power should be turned off at this stage), attach the mounting bracket to the electrical box. To ensure aesthetic alignment of the alarm with the hallway, or wall, the "A" line on the mounting bracket must be parallel with the hallway when ceiling mounted, or horizontal when wall mounted.

### Activating The Alarm

1. After installation of the mounting bracket, attach the AC quick connect harness to the unit.
  - If AC power is on at this time, the unit will chirp once to signal that power has been applied, and a voice message will prompt you to push the test button.
  - If AC power is on at this time, confirm the green LED is on constant.
2. Rotate the unit fully onto the mounting bracket, which will automatically activate the backup battery.
  - **NOTE:** Attaching AC power first, without using the mounting bracket, will result in a low battery chirp, and voice message "Low Battery. Pile Faible." because the battery backup has not been activated. Attach unit to mounting bracket very soon after applying AC power to avoid false low battery notification.
  - **NOTE:** The battery activation is a one-time feature. After activation, the battery cannot be turned off, and can only be deactivated at the end of product life. See Section 11: Deactivation of Alarm.

**The alarm is now activated!** After installation/activation, test your alarm as described in Operation and Testing section.

**NOTE: The battery activation is a one-time feature. After activation, the battery cannot be turned off, and can only be deactivated at the end of product life. See Section 11: Deactivation of Alarm.**

**⚠ WARNING: Failure to properly install and activate this alarm will prevent proper operation of this alarm and will prevent its response to fire hazards.**

## 7. Operation and Testing

**OPERATION:** The alarm is operating once it is activated and testing is complete. When products of combustion, (smoke), are sensed, the unit sounds a loud 85dB pulsating alarm with voice message. The voice message for smoke detection is "Fire! Feu!". The strobe will flash every second. This will continue until the air is cleared.

**⚠ WARNING:** Due to the loudness (85 decibels) of the alarm, always stand an arm's length (about 2.5 feet) away from the unit or use ear protection when testing, and avoid looking at the bright strobe directly, or cover it with your hand.

### Strobe Synchronization

This strobe alarm will automatically synchronize (flash at the same time) with other P4010ACLEDSCA strobes that are part of the interconnected system. Synchronization will take up to 20 seconds when in alarm.

**Note:** The alarms will not synchronize during test mode.

**TESTING:** Test your alarm by pressing the test button until the unit chirps, then release the test button. The unit will then emit three long alarm beeps, followed by the voice message "Fire! Feu!" and a series of strobe flashes. Alarm, voice, and strobe will activate if the electronic circuitry, horn, speaker, and battery are working. If the alarm, voice, or strobe do not activate, the unit must be replaced.

**Weekly testing is required to ensure proper operation.** Erratic or low volume sound (or no sound), or no strobe activation from your alarm may indicate a defective alarm and it should be returned for service. See deactivation section to determine how to prepare the unit for shipment or disposal.

**⚠ WARNING:** DO NOT use an open flame to test your alarm, you could damage the alarm or ignite combustible materials and start a structure fire.

### Ambient Light Sensing

During low light ambient conditions, the green LED will reduce in brightness and intensity. The unit samples the ambient light conditions of the alarm's location and, if possible, determines a Night/Day cycle. A valid Night/Day cycle will inhibit Low Battery chirps at night. It will also inhibit End of Unit Life chirps at night if the unit is within the first 30 days of the End of Unit Life period. After 30 days, the chirps will not be inhibited.

**⚠ WARNING - REPLACE ALARM AS SOON AS POSSIBLE WHEN IN END OF UNIT LIFE OR LOW BATTERY MODE.**

If the unit cannot determine a valid Night/Day cycle because the unit is located in either a constantly dark or lighted location, Low Battery and End of Unit Life chirps will not be inhibited. If the unit is moved to a location that is not constantly dark or lighted, it will determine a Night/Day cycle because the unit continuously samples ambient light conditions.

## 8. Alarm Visual and Audible Indicators

The following table describes the visual and audible alarm conditions the unit may encounter and illustrates how the unit will indicate normal standby, alarm and error conditions.

Operational Mode	Visual Indications	Audible Indications	Note/Action:
Normal Operation	Green LED on continuous: AC power applied. Green LED blink every 60 seconds: Battery Backup, (DC Only).	None	
Test/Hush Button Press	Red LED blink in time with alarm pattern. Strobe will flash 1 time per second.  AC power must be applied - strobe will not operate with DC Only power applied.	Two sets of 3 long beeps with voice "Fire! Feu!"	Test/Hush button press will initiate test sequence. Perform Test/Hush button press once a week to verify proper alarm operation.
Smoke or Fire detected	Red LED blinks in time with alarm pattern.  Strobe will flash 1 time per second. AC power must be applied - strobe will not operate with DC Only power applied.	3 long beeps, voice message "Fire! Feu!", 3 long beeps repeating.	Smoke has been detected. Follow the instructions at the beginning of this User Guide under the section "What to do when the alarm sounds, Smoke Alarm activation".
CO Alarm from an interconnected CO or Combo unit (this unit is not a CO alarm).	Red LED blinks in time with alarm pattern.  Strobe will flash 4 times, go off for 5 seconds, and then repeat. AC power must be applied - strobe will not operate with DC Only power applied.	4 quick beeps, voice message "Warning! Carbon Monoxide. Monoxyde de carbone.", 4 quick beeps, repeating.	Carbon monoxide has been detected by an interconnected CO or combo unit. Follow the instructions at the beginning of this User Guide under the section "What to do when the alarm sounds, CO alarm activation."
Smoke Alarm Hush	Red LED blink every 2 seconds	Voice message "Hush mode activated. Mode Hush activé."	Pressing the Test/Hush button during a known smoke alarm event will activate the Hush feature which will silence the alarm for approximately 8-10 minutes. This feature is to be used only when a known alarm condition, such as smoke from cooking, activates the alarm.
Smoke Alarm Hush Mode Cancelled	None	Voice message "Hush Mode Cancelled. Mode Hush annulé."	When smoke levels drop below the alarm threshold, the voice message "Hush Mode Cancelled. Mode Hush annulé" will occur when the user presses the Test/Hush button again or when the Hush Mode timer expires after 8-10 minutes.

## 8. Alarm Visual and Audible Indicators

Operational Mode	Visual Indications	Audible Indications	Note:
<b>Initiating Alarm (Multiple alarms in an Interconnected system)</b>	Green LED blinks once per second indicating that this is the unit initiating the alarm in an interconnected, multiple alarm, system.  Red LED blink in time with alarm pattern.  Strobe will flash 1 time per second.  AC power must be applied - strobe will not operate with DC Only power applied.	3 long beeps, voice message "Fire! Feu!", 3 long beeps, repeating.	Green LED operation of non-initiating alarms: AC power applied: On continuously. DC Only power applied: Flash once every minute. All P4010ACLEDSCA strobes in an interconnected system will flash in synchronization.
<b>Low Battery</b>	Amber LED blink 2 times per second – AC Power applied  Red LED blink in time with unit chirp every 60s. Battery backup (DC only).	AC Power applied – Unit will chirp once a minute followed by the voice message "Low Battery. Pile Faible"  Battery Backup – Unit will chirp once a minute, the voice message "Low Battery. Pile Faible" will occur once every 15 minutes.	Ambient Light Sensor Feature – Inhibits Low Battery chirps during the night.  The alarm should be replaced as soon as possible. See section 11, Deactivation of Alarm, before disposing of alarm.
<b>Fault Mode</b>	Red LED will blink in time with unit chirp every 30 seconds. Separate from the fault blink, the amber LED will also flash a fault code every 30 seconds. The fault code can be 2 to 14 flashes depending on the fault type.	Unit will chirp every 30 seconds.	Remove, deactivate, and replace alarm as soon as possible.
<b>End of Unit Life</b>	Red LED blinks in time with unit chirp, 2 times every 30 seconds.	Unit will chirp 2 times every 30 seconds.	Ambient Light Sensor - Inhibits End of Unit Life chirps at night for the first 30 days of the End of Unit Life period.  Remove, deactivate, and replace alarm as soon as possible."
<b>End of Unit Life, Hush Mode</b>	Red LED blinks once every 2 seconds.	None, End of Unit Life chirps silenced.	Pressing the Test/Hush button will silence the chirps for 3 days at a time for a maximum of 30 days. After 30 days, End of Unit Life chirps cannot be silenced.  Remove, deactivate, and replace alarm as soon as possible.
<b>End of Unit Life, (30 days after End of Life chirps begin)</b>	Red LED will blink in time with unit chirp 2 times every 30 seconds.	Unit will chirp 2 times every 30 seconds.	Remove, deactivate, and replace alarm as soon as possible.

If you require further information please contact Product Support at 1-800-880-6788 or write us at: Kidde Canada Inc., P.O. Box 40, Apsley, ON K0L 1A0 or visit us on the web at [www.kiddecanada.com](http://www.kiddecanada.com).

## 9. Nuisance and Hush

This smoke/strobe alarm is designed to minimize nuisance alarms. Cigarette smoke will not normally cause the unit to alarm, unless the smoke is blown directly into the alarm. Combustion particles from cooking may set off the alarm if it is located too close to a cooking appliance. Large quantities of combustible particles are generated from spills or when broiling. Using the fan on a range hood which vents to the outside (non-recirculating type) will also help prevent nuisance alarms from occurring by removing these combustible products from the kitchen.

If the source of a smoke alarm is immediately known (3 long beeps with the voice message "Fire! Feu!" and a strobe flash every second), you can use the Hush feature to silence the alarm for approx. 8-10 minutes. If no fire is present, check to see if one of the reasons listed in "Locations to avoid" may have caused the alarm. If a fire is discovered, get out and call the fire department.

**Hush® Control:** Hush® control is extremely useful in a kitchen area or other area prone to nuisance alarms. The Hush® feature has the capability of temporarily desensitizing the alarm circuit for approximately 8-10 minutes.

This feature is to be used only when a known alarm condition, such as smoke from cooking, activates the alarm. The smoke alarm is desensitized by pushing the Test/Hush button on the initiating smoke alarm cover. If the smoke is not too dense, the initiating alarm will silence immediately with the voice message "Hush mode activated" and the red LED blinks every 2 seconds. This indicates that the alarm is in a temporarily desensitized condition (pushing the Test/Hush button on any unit other than the initiating alarm unit will do nothing.).

The smoke alarm will automatically reset after approximately 8-10 minutes and sound the alarm and issue a voice prompt stating "Fire! Feu!" and the strobe will flash once per second if particles of combustion are still present.

The Hush® feature can be used repeatedly until the air has been cleared of the condition causing the alarm. Pushing the Test/Hush button on the alarm will end the temporarily desensitized period, resulting in the voice message "Hush Mode Cancelled. Mode Hush annulé."

If the smoke is not too dense, after 10 minutes the alarm will return to normal operation.

**NOTE: Dense smoke will override the Hush® feature and sound a continuous alarm and the strobe will flash once per second.**

**⚠ CAUTION: Before using the alarm Hush® feature, identify the source of the smoke and be certain safe conditions exist.**

## 10. Battery

### BATTERY ACTIVATION AND DEACTIVATION

**NOTE:** This alarm is powered by 120V AC with a sealed lithium battery system. No battery installation or replacement is necessary for the life of the alarm.

**IMPORTANT:** Constant exposure to high or low humidity may reduce battery life.

**⚠ WARNING! DO NOT ATTEMPT TO OPEN THE ALARM FOR ANY REASON!**

Do not try to repair the smoke alarm yourself. No serviceable parts included.


**Low battery:** This alarm is equipped with a low battery monitor circuit. While powered by AC, the amber LED will blink 2 times a second, and the unit will chirp once a minute, followed by the voice message "Low Battery! Pile Faible!" When powered in DC Battery Backup mode, the alarm will continue to chirp and blink every 60 seconds, but the voice message will occur once every 15 minutes. This will continue for a minimum of seven (7) days in DC Battery Backup mode.

***THE UNIT MUST BE DEACTIVATED (see "Deactivation of Alarm" section) and replaced within 7 days of the first occurrence of the "Low Battery Warning" to provide continuous alarm protection.***

## 11. Deactivation of Alarm

### **⚠ WARNING!**

- Deactivation of the alarm is permanent. Once the alarm has been deactivated, it cannot be reactivated!
- Once deactivated, the alarm will NO LONGER DETECT SMOKE.
- Once the alarm is deactivated the battery will be depleted and the alarm will no longer function.
- Once the alarm has been deactivated, it cannot be mounted onto the mounting plate or reactivated.

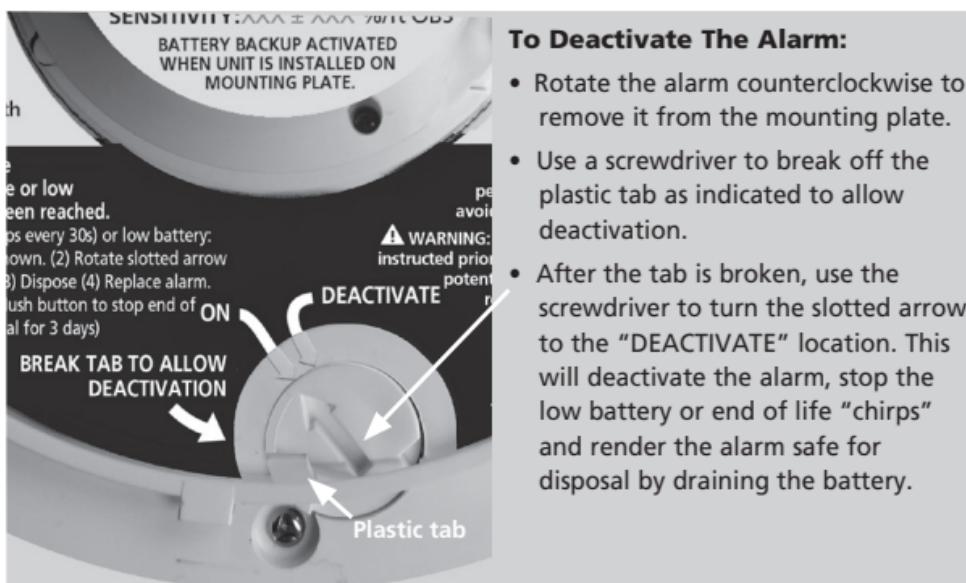

**⚠ WARNING!** Failure to DEACTIVATE alarm as instructed prior to disposal may create potential for lithium battery related fire or hazard.

## 12. Maintenance

### **Your alarm should be cleaned at least once a year**

You can clean the interior of your alarm (sensing chamber) by using compressed air or a vacuum cleaner hose and blowing or vacuuming through the openings around the perimeter of the alarm. The outside of the alarm can be wiped with a damp cloth. Use only water to dampen the cloth, use of detergents or cleaners could damage the alarm.

If the alarm is in Fault mode and the amber LED is blinking a fault code of 10 flashes, the alarm may be in need of cleaning. After cleaning, press the Test/Hush button. If the fault does not clear, the alarm needs to be replaced.

- Never use detergent or other solvents to clean the unit.
- Avoid spraying air freshener, hair spray, or other aerosols near the alarm.
- Do not paint the unit. Paint will seal the vents and interfere with the sensor's ability to detect smoke.
- Never attempt to disassemble the unit or clean inside. This action will void your warranty.

## 13. Good Safety Habits

**⚠ WARNING: Reinstall the Strobe/Smoke Alarm as soon as possible to assure continuous protection.**

**Develop and practice a plan of escape!**

- Install and maintain fire extinguishers on every level of the home and in the kitchen, basement and garage. Know how to use the fire extinguisher prior to an emergency.
- Make a floor plan indicating all doors and windows and at least two (2) escape routes from each room. Second-storey windows may need an escape ladder.
- Have a family meeting and discuss your escape plan, showing everyone what to do in case of fire.
- Determine a place outside your home where you all can meet if a fire occurs.
- Familiarize everyone with the sound and visual signals of a smoke, a carbon monoxide and/or strobe alarm and train them to leave your home when they hear or see it.
- Practice a fire drill at least every six months, including fire drills at night. Ensure that small children hear the alarm and wake when it sounds. They must wake up in order to execute the escape plan. Practice allows all occupants to test your plan before an emergency. You may not be able to reach your children. It is important they know what to do.
- Current studies have shown smoke alarms may not awaken all sleeping individuals, and that it is the responsibility of individuals in the household that are capable of assisting others to provide assistance to those who may not be awakened by the alarm sound, or to those who may be incapable of safely evacuating the area unassisted.

## 13. Good Safety Habits

### Alarm Exit Procedure

- Leave immediately by your escape plan. Every second counts, so don't waste time getting dressed or picking up valuables.
- In leaving, don't open any inside door without first feeling its surface. If hot, or if you see smoke seeping through cracks, don't open that door! Instead, use your alternate exit. If the inside of the door is cool, place your shoulder against it, open it slightly and be ready to slam it shut if heat and smoke rush in.
- Stay close to the floor if the air is smokey. If possible do not breathe too deeply to avoid smoke inhalation. Breathe through a cloth (preferably wet) if possible.
- Once outside, go to your selected meeting place and make sure everyone is there.
- Call the fire department from your neighbor's home - not from yours!
- Don't return to your home until the fire officials say that it is all right to do so.
- There are situations where a smoke alarm may not be effective to protect against fire. For instance:
  - a) smoking in bed
  - b) leaving children home alone
  - c) cleaning with flammable liquids, such as gasoline
  - d) fires where the victim is intimate with a flaming initiated fire; for example, when a person's clothes catch fire while cooking
  - e) fires where the smoke is prevented from reaching the detector due to a closed door or other obstruction
  - f) incendiary fires where the fire grows so rapidly that an occupant's egress is blocked even with properly located detectors

## 13. Good Safety Habits

### Additional Recommendations

The National Fire Protection Association's Standard 72 provides the following information:

Where required by other governing laws, codes, or standards for a specific type of occupancy, approved single and multiple-station smoke alarms shall be installed as follows:

1. In all sleeping rooms and guest rooms
2. Outside of each separate dwelling unit sleeping area, within 6.4 m (21') of any door to a sleeping room, with the distance measured along a path of travel
3. On every level of a dwelling unit, including basements
4. On every level of a residential board and care occupancy (small facility), including basements and excluding crawl spaces and unfinished attics
5. In the living area(s) of a guest suite
6. In the living area(s) of a residential board and care occupancy (small facility)

### Smoke Detection - Are More Smoke Alarms Desirable?

Required number of smoke alarms (as shown in Figure 1A and Figure 1B): The required number of smoke alarms might not provide reliable early warning protection for those areas separated by a door from the areas protected by the required smoke alarms. For this reason, it is recommended that the householder consider the use of additional smoke alarms for those areas for increased protection.

The additional areas include the basement, bedrooms, dining room, furnace room, utility room, and hallways not protected by the required smoke alarms. The installation of the smoke alarms in the kitchen, attic (finished or unfinished), or garage is normally not recommended, as these locations occasionally experience conditions that can result in improper operation.

Alarms should be installed in accordance with the National Fire Protection Association's Standard 72 (NFPA, Batterymarch Park, Quincy, MA 02269).

Notify your local fire department and insurance company of your smoke alarm installation.

## 14. Warranty

### TEN YEAR LIMITED WARRANTY

If after reviewing this user guide you feel that your alarm is defective in any way, do not tamper with the unit. In many cases, the quickest way to exchange your alarm is to return it to the original place of purchase. Alternatively, you may return it for servicing to Kidde. If you have questions, call Kidde Customer Service at 1-800-880-6788.

Kidde warrants that the enclosed alarm will be free from defects in material and workmanship or design under normal use and service for a period of ten years from the date of purchase. The obligation of Kidde under this warranty is limited to repairing or replacing the alarm or any part which we find to be defective in material, workmanship or design, free of charge, upon sending the alarm with proof of date of purchase, postage and return postage prepaid, to: Kidde Canada Inc., P.O. Box 40, Apsley, ON K0L 1A0.

This warranty shall not apply to the alarm if it has been damaged, modified, abused or altered after the date of purchase or if it fails to operate due to improper maintenance or inadequate power. Any implied warranties arising out of this sale, including but not limited to the implied warranties of description, merchantability and fitness for a particular purpose, are limited in duration to the above warranty period. In no event shall the Manufacturer be liable for loss of use of this product or for any indirect, special, incidental or consequential damages, or costs, or expenses incurred by the consumer or any other user of this product, whether due to a breach of contract, negligence, strict liability in tort or otherwise. The Manufacturer shall have no liability for any personal injury, property damage or any special, incidental, contingent or consequential damage of any kind resulting from gas leakage, fire or explosion.

Since some provinces do not allow limitations of the duration of an implied warranty or do not allow the exclusion or limitation of incidental or consequential damages, the above limitations or exclusions may not apply to you. While this warranty gives you specific legal rights, you may also have other rights which vary from province to province. The above warranty may not be altered except in writing signed by both parties hereto.

**IMPORTANT: Do not remove unit back cover. Back cover removal will void warranty.** Your Kidde smoke alarm is not a substitute for property, disability, life or other insurance of any kind. Appropriate insurance coverage is your responsibility. Consult your insurance agent.



Kidde Canada Inc., P.O. Box 40, Apsley, ON K0L 1A0

#### QUESTIONS OR FOR MORE INFORMATION

Call our Consumer Hotline at **1-800-880-6788** or contact us at our website at **www.kiddecanada.com**

Made in China